m<u>e Meadows</u> em & Passmore Ltd

HOROLOGICAL SUPPLIERS

Wholesale - Trade - Retail
Registered in England No. 3023507

Barcelona - Dieppe - Munich - New York

1 ELLEN STREET, PORTSLADE, BRIGHTON, EAST SUSSEX, BN41 1EU ENGLAND

Telephone 01273 421 321

Fax 01273 421 322

www.m-p.co.uk


Weathervane Assembly and Installation Guide


Before fitting the Weathervane, we recommend you should familiarize yourself with the component against the detail below. A trial assembly is often worthwhile and can help to save actual installation time. The ëthiniend of the rod is where the vane section fits, so this is the top. Assemble on to the main shaft as follows:-larger balls, directionals (note how they link together) and smaller ball. This smaller ball has been designed to sit on the shoulder of the rod with the smaller hole acting as a ëstopi.

To install: The rod needs to be properly secured and vertical (one of our kits may have been purchased to assist with this) with at least 150mm of the main rod exposed and visible.

Once the rod is secure, the components are assembled and the directionals set to the correct orientation then secured in place with the locking screws.

Lightly grease inside the tube of the main vane section before sliding this into position on the shaft and check for free rotation.

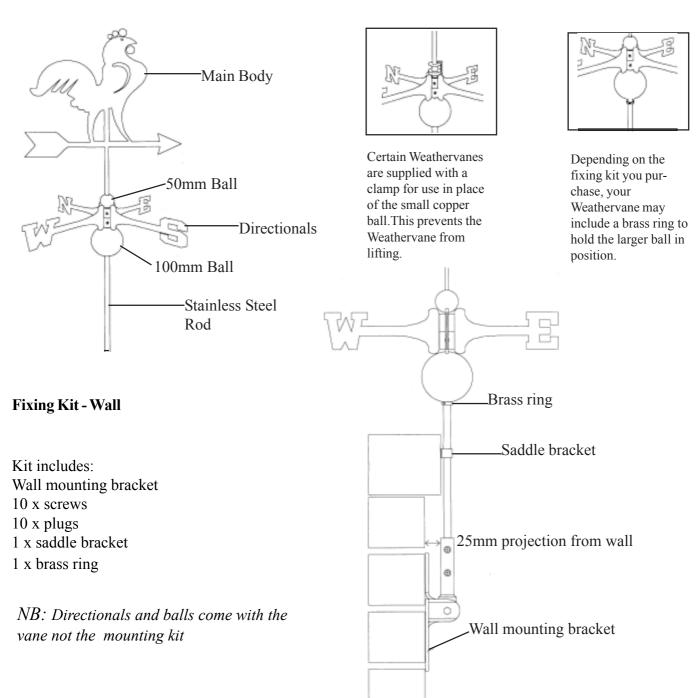

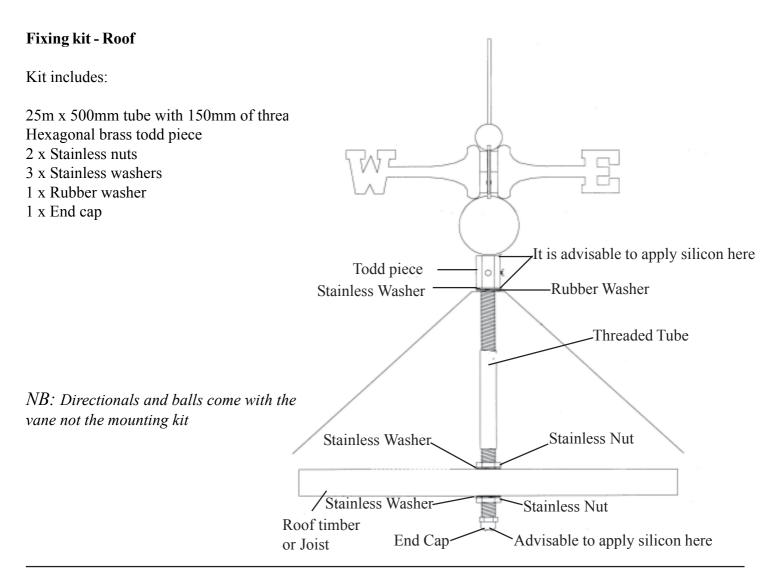

Fixing Kit - Gable

Kit includes:


Gable Mounting bracket

6 x screws

6 x plugs

1 x saddle bracket

1 x brass ring

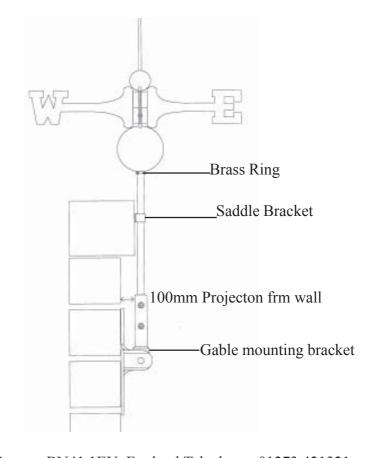

NB: Directionals and balls come with the vane not the mounting kit

M&P 1 Ellen Street, Portslade, Brighton, East Sussex, BN41 1EU, England. Telephone: 01273 421321